


Domain Controller Backup

Install Windows Server Backup

1. Open Server Manager.
2. Go to Manage > Add Roles and Features.
3. On the Features page, check 'Windows Server Backup'.
4. Click 'Install'.

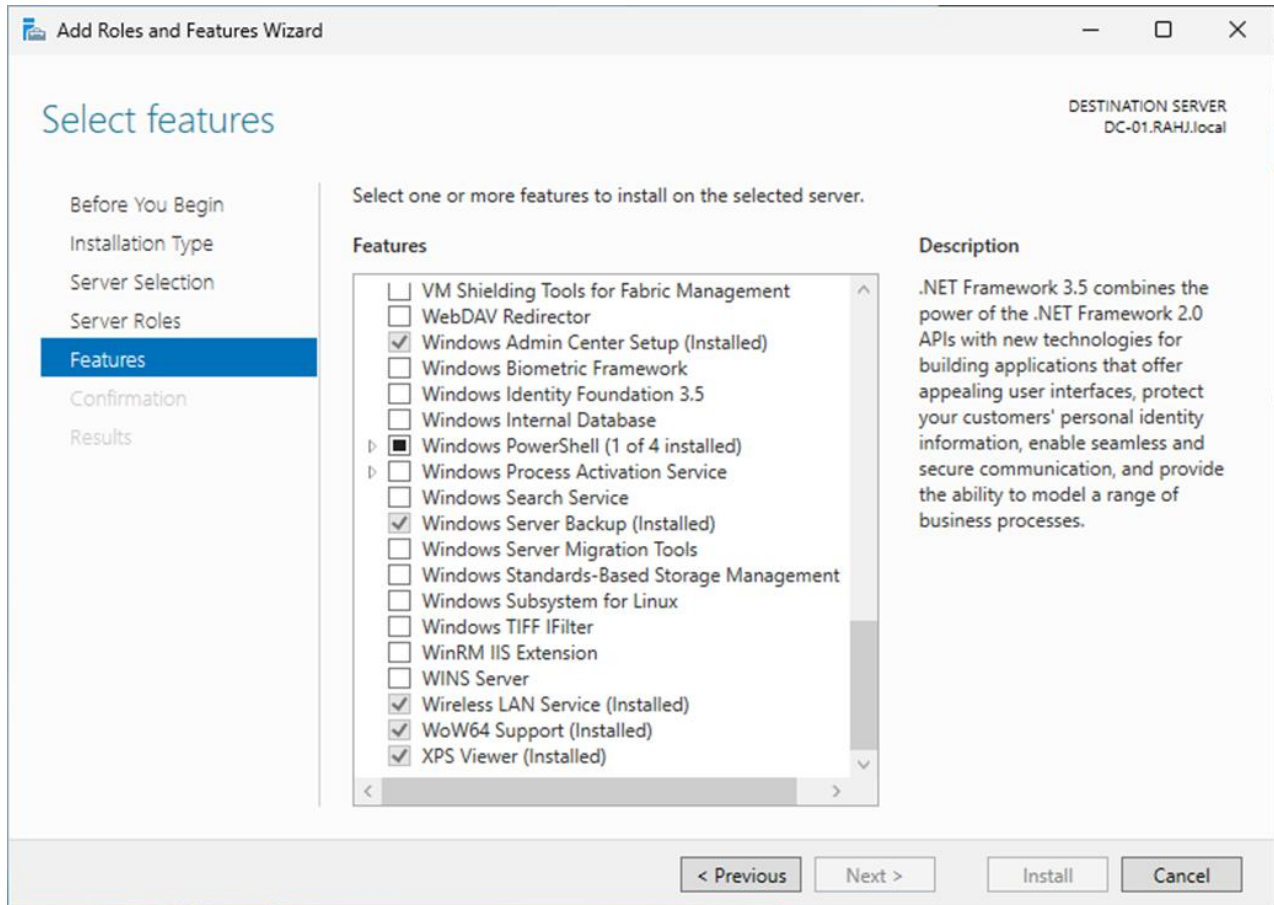

Backup Folder Configuration

A shared 'Backup' folder was created on the B: drive of the file server (FS-01). The sharing permissions are set so that only Domain Admins have full control.

NTFS Permissions for the folder:

Permission Entity	Owner	Permissions
Domain Admins		Full Control
SYSTEM		Full Control

Inheritance has been disabled for this folder to enhance security.

Manual Backup (Backup Once)

1. Go to Server Manager > Tools > Windows Server Backup.
2. Click 'Backup Once' in the right pane.
3. Select Backup Options: 'Full Server'.

4. Specify Destination Type: 'Remote Shared Folder'.
5. Specify the remote folder path: \\FS-01\Backup.
6. Access control: Select 'Do not inherit'.
7. Click 'Backup' to start the process.

